

Wireless Install Guide


1. Powering On / Off The Device

Power On: Press and hold the power button. Both the blue and green LEDs will light solid for about 1 second. To verify the device is on, briefly press the power button—both LEDs will remain solid while the button is pressed.


Note: Holding the button for about 3 seconds will start the power-off sequence.

Power Off: Press and hold the power button. Both LEDs will flash rapidly together for about 5 seconds, then remain solid for about 1.5 seconds before the device powers off. To verify the device is off, briefly press the power button. No LEDs should illuminate.

LED	MEANING
On	hold for ~3 sec.
Off	hold for ~5 sec.
Good Connection	Solid Green (CELL) Solid Blue (GPS)
Bad Connection	Flashing Green Flashing Blue

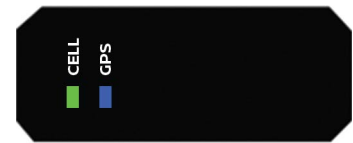

Mount Lights Facing Up

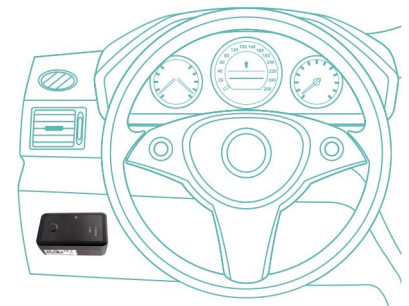

2. Mounting The Device

Securely install the device under the dash of vehicle using either a zip-tie, velcro, or double sided tape. (items not included)

Make sure the lights are facing upwards, horizontally flat and that there is no metal objects above the device or it will not operate correctly. Make sure that the unit is kept free from direct exposure to elements such as heat.

3. Recommendations

It is recommended that wireless trackers be installed in the same location on every vehicle to ensure consistency and simplify future service or replacement. Due to battery shelf-life limitations, inventory should be rotated on a first-in, first-out (FIFO) basis, with the oldest units installed first.

4. Test The Installation

1. Open XeroIn Dealer App.
2. Click Start New Installation.
3. Follow the steps to complete & test install.

AutoNote Solutions Technical Support

Available Monday - Friday 9:00am-6:00pm
(305) 851-3700 / helpdesk@autonotesolutions.com

IMPORTANT: Install devices outdoors only. Installing indoors (e.g., under a steel roof or in a garage) can block satellite signals and cause lost connections.